

Using AudioLink

QUICK TIPS

MED⁹EL



Turn On/Off AudioLink

Hold down 2 seconds until LED shows green/orange light (on) or no light (off). AudioLink turns off automatically when not used for approximately 5 minutes or when it is not powered by USB.



Syncing with Processor

Turn off processor and turn on the AudioLink. Position the processor coil over the volume button of the AudioLink.

Turn on processor.

Left and right connection symbol will illuminate if the pairing process was successful.

MICROPHONE LED LIGHT



Using Remote Microphone

Turn on AudioLink and press the Mic button. Sound from the AudioLink's microphone will begin streaming into your processor.

By default, the processor microphone will be muted. To change the mix ratio, press the key to toggle between different mixing setups.

Pairing AudioLink to Your Phone

In your phone, make sure the Bluetooth setting is ON and AudioLink is ON.

Simultaneously press the Mix button and the Mic button for about 2 seconds. Bluetooth symbol will blink indicating that the AudioLink is in pairing mode.

 
Select MED-EL AudioLink option from list of devices.
(If asked for a code, enter 0000.)

As long as MED-EL AudioLink is the chosen Bluetooth option on your phone, you can easily answer and initiate calls from your phone.



Streaming Music

Connect the 2.5 to 3.5 audio adapter to the port on the AudioLink. Connect the stereo cable with two 3.5 mm audio jacks to the adapter and the other end to the headphone port of target audio source (phone, tablet, etc.). Turn on the AudioLink.

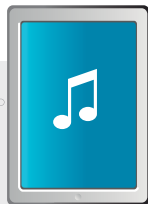

Streaming Audio from TV

Using the AudioLink RCA/stereo cable, connect the red/white audio plugs in the appropriate RCA sockets on the TV. Connect the 3.5 mm audio jack of the stereo cable with the AudioLink docking station. Place AudioLink in the docking station (be sure that the rubber socket cover is positioned in the designated groove in the docking station). Turn on TV.