Using Roger™Pen™

QUICK TIPS with Roger™ MyLink





Turn On/Off Roger Pen

Hold down 2 seconds until green light (on) or red light (off) appears. While Roger Pen is on, it will continue to blink green.



Syncing with Roger MyLink Receiver

Hold this button down with Roger MyLink receiver no more than 5" away. (The Roger MyLink must be turned on before this step.)

Light on Roger Pen will flash blue one time, then green to indicate it is synced. The user will hear a confirmation tone if they are syncing while "on-air."



Changing Microphone Modes

Press to change to different mic modes:

- 0. Automatic (default)
- 1. Interview
- 2. Conference
- 3. Lanyard



To Mute Roger Pen

Just quickly tap the power button. Indicator light will turn violet. To un-mute, tap it again and the light will blink green again.



Pairing Roger Pen to Your Phone

In your phone, make sure the Bluetooth setting is ON and your Roger Pen is ON.

Press green "answer" phone icon until blue light appears, then green light, then blinking blue. (approx. 8 seconds)

Select Roger Pen option from list of devices.

(If there are multiple devices already paired with phone, you may have to scroll down the list to reveal the Roger Pen that is being paired.)



Turning On Bluetooth on Roger Pen

Press and hold green "answer" phone icon for 2 seconds. Blue light will glow, then return to blinking green light. (Bluetooth will remain active even when the Roger Pen is off - and still blink blue.



Turning Off Bluetooth on Roger Pen

Make sure Roger Pen is ON (blinking green). Press red "end call" phone icon until blue light fades. (approx. 3 seconds)



USING Roger MyLink receiver:

Simply turn on your Roger MyLink and use its volume controls. After syncing your Roger MyLink to the Roger Pen, you must select a telecoil setting on your remote (T or MT) to hear the audio from the Roger Pen. The Roger MyLink features a telecoil neckloop that is worn around your neck.



Roger MyLink telecoil neckloop

Using Roger™Select™

MED[©]EL

QUICK TIPS with Roger™ MyLink



Turn On/Off Roger Select

Hold POWER button down 2 seconds until green lights appear (on) or disappear (off). While Roger Select is on, the power button will continue to blink green, orange or red depending on battery level.



Syncing with Roger MyLink Receiver

Turn on your Roger MyLink. Position the Roger Select no more than 5" away from the Roger MyLink.

Firmly push the Roger Select's SYNC button once (but do not hold it down).

Roger Select will quickly flash blue, then green to show successful syncing. If syncing while wearing the processor, an audible dual beep will be heard.



Images and illustrations courtesy of Phonak



Changing Microphone Modes

Just tap on the Roger Select to choose which of its six microphones you wish to activate. The green lights will appear to show which microphones are active. Tap in the center to reactivate all six microphones.

To mute all microphones, tap in the center of the Roger Select and a red light will appear. Tap again to reactivate the microphones.

When using as a **lanyard mic**, the Roger Select will automatically activate the microphone closest to the speaker's mouth.

When repositioned to a **table mode**, the Roger Select will automatically activate all six microphones.



Pairing Roger Select to Your Phone

In your phone, make sure the Bluetooth setting is ON and your Roger Select is ON.

Press Bluetooth icon once and a blinking blue light appears.

 
Choose Roger Select option from list of devices. (If there are multiple devices already paired with phone, you may have to scroll down the list to reveal the Roger Select that is being paired.)

Your phone is now paired and Roger Select's inner circle of lights will intermittently blink blue to show that Bluetooth is active.



Press Bluetooth button until blue light fades. (approx. 2 seconds)

To turn Bluetooth back on, simply repeat this step and the blue light will appear. (You may need to double-check that the Roger Select shows as "connected" to your phone or audio device.)



Simply turn on your Roger MyLink and use its volume controls. After syncing your Roger MyLink to the Roger Pen, you must select a telecoil setting on your remote (T or MT) to hear the audio from the Roger Pen. The Roger MyLink features a telecoil neckloop that is worn around your neck.



Roger MyLink telecoil neckloop

